

Key function

Combination key	Function	Description
FN+ESC	` ~	
FN+1	F1	
FN+2	F2	
FN+3	F3	
FN+4	F4	
FN+5	F5	
FN+6	F6	
FN+7	F7	
FN+8	F8	
FN+9	F9	
FN+0	F10	
FN+-	F11	
FN+=	F12	
FN+ ←	Switch light mode	In total 20 modes
FN+[{	Light brightness adjust +	Brightness adjust
FN+] }	Light brightness adjust -	Brightness adjust
FN+ ; :	Light speed adjust +	
FN+ ' "	Light speed adjust -	
FN+LEFT CTRL	FN+LEFT CTRL to turn ON/OFF arrow keys ↑ ↓ ← →	
FN+WIN-L	Lock WIN	
FN+U	Print screen	
FN+I	Srcoll lock	
FN+()	Pause	
FN+J	Insert	
FN+K	Home	
FN+L	Page up	
FN+M	Delete	
FN+, <	End	
FN+, >	Page Down	
FN+A	Pause	
FN+S	Previous	
FN+D	Next	
FN+F	Volume -	
FN+G	Volume +	
FN+H	Mute	

Funkcije tipki

Kombinacija tipki	Funkcija	Opis
FN+ESC	` ~	
FN+1	F1	
FN+2	F2	
FN+3	F3	
FN+4	F4	
FN+5	F5	
FN+6	F6	
FN+7	F7	
FN+8	F8	
FN+9	F9	
FN+0	F10	
FN+-	F11	
FN+=	F12	
FN+ ←	Izmjena načina osvjetljenje	20 načina
FN+[{	Razina osvjetljenja +	Podešavanje svjetline
FN+}]	Razina osvjetljenja -	Podešavanje svjetline
FN+ ;:	Brzina efekta osvjetljenja +	
FN+ ' "	Brzina efekta osvjetljenja -	
FN+LEFT CTRL	FN+LEFT CTRL da bi uključili/isključili strelice ↑ ↓ ← →	
FN+WIN-L	Zaključavanje WIN tipke	
FN+U	Print screen	
FN+I	Srcoll lock	
FN+()	Pause	
FN+J	Insert	
FN+K	Home	
FN+L	Page up	
FN+M	Delete	
FN+,<	End	
FN+.>	Page Down	
FN+A	Pause	
FN+S	Previous	
FN+D	Next	
FN+F	Smanjivanje zvuka	
FN+G	Pojačavanje zvuka	
FN+H	Mute	