



SHINOBI 2

MECHANICAL RGB GAMING KEYBOARD

User manual / Upute

Main specification:

- * 61 keys for US layout, 62 keys for other layouts
- * Double injection keycap
- * Hot swappable
- * Full RGB light
- * Full keys anti-ghosting
- * With dual back feets, and 4 pcs anti-slip silicone pad on the back
- * 1.8 meters braided cable
- * Support for Win XP, Win7, Win8, Win10, Win11, OS X, Linux
- * Power-off Memory
- * Dimensions: 292 * 102 * 39 mm
- * Weight: 530 g

EN-1

Light adjustment:

Keys	function
Fn+P	Light brightness reduction (5-level adjustment)
Fn+{	Light brightness increase (5-level adjustment)
Fn+;	Reduced light speed (5-level adjustment)
Fn+' "	Light speed increase (5-level adjustment)
FN+O	Monochrome cycle mode
Fn+}	light on / light off
Fn+\	Switch lights, 18 kinds of RGB light modes

Multimedia functions:

Keys	function
Fn+Z	previous song
Fn+X	Next song
Fn+C	Play / pause
Fn+V	Mute
Fn+N	Volume +
Fn+B	Volume -

EN-2

Key combination:

Keys	function
Fn+Tab	Restore keyboard factory mode (press for 3 seconds)
Fn+Esc	~
Fn+shift+Esc	~
Fn+ 1	F1
Fn+ 2	F2
Fn+ 3	F3
Fn+ 4	F4
Fn+ 5	F5
Fn+ 6	F6
Fn+ 7	F7
Fn+ 8	F8
Fn+ 9	F9
Fn+ 0	F10
Fn+ —	F11
Fn+ =+	F12
Fn+Y	PrtSc
Fn+ U	ScrLk
Fn+I	Pause
Fn+ J	Ins
Fn+ K	Home
Fn+ L	Pg Up
Fn+ M	Del
Fn+ < ,	End
Fn+ > ,	PgDn
Fn+ ? /	↑
Fn+Alt	←
Fn+app	↓
Fn+Ctrl	→

EN-3

Windows lock:

Fn+win: Left WIN Window Key + APP lock / unlock (default open)

FN + Left Ctrl = Switch between 3 different FN keyboard modes.

* Keyboard mode 1:

Press 1 and it types 1. Press Y and it types Y. Press FN+Y and it types "Prtsc".

* Keyboard mode 2:

Press 1 and it types F1. Press Y and it types Y. Press FN+1 and it types 1, press FN+Y and it types "Prtsc", press /? and it types ↑


* Keyboard mode 3:

Press 1 and it types F1. Press Y and it types "Prtsc". Press FN+1 and it types 1, press FN+Y and it types Y, press /? and it types ↑

Remarks: multimedia keys from Z - N will not change, to press FN+Z~N to access to these functions.

Note:
The position of the lighting control keys may vary depending on the keyboard layout.

Napomena:
Pozicija tipki za kontrolu osvjetljenja može varirati u ovisnosti o layoutu tastature.

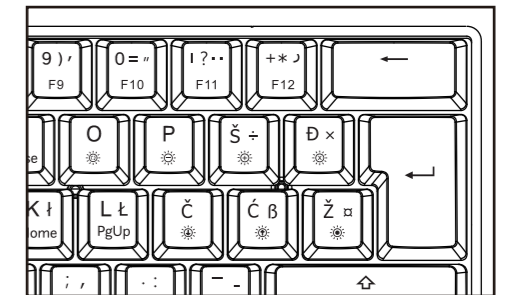

EN-4

Podešavanje osvjetljenja:

Kombinacija tipki	Funkcija
Fn+P	Smanjivanje osvjetljenja (5 razina)
Fn+{	Pojačavanje osvjetljenja (5 razina)
Fn+;	Smanjivanje brzine efekta (5 razina)
Fn+' "	Pojačavanje brzine efekta (5 razina)
FN+O	Jednobojni mod - mijenjanje boja
Fn+}	LED on / LED off
Fn+\	Promjena načina osvjetljenja (18 načina)

HR-1

Kombinacije tipki:

Tipke	Funkcija
Fn+Tab	Povratak na tvorničke postavke (držati 3 sekunde)
Fn+Esc	~
Fn+shift+Esc	~
Fn+ 1	F1
Fn+ 2	F2
Fn+ 3	F3
Fn+ 4	F4
Fn+ 5	F5
Fn+ 6	F6
Fn+ 7	F7
Fn+ 8	F8
Fn+ 9	F9
Fn+ 0	F10
Fn+ —	F11
Fn+ =+	F12
Fn+Y	PrtSc
Fn+ U	ScrLk
Fn+I	Pause
Fn+ J	Ins
Fn+ K	Home
Fn+ L	Pg Up
Fn+ M	Del
Fn+ < ,	End
Fn+ > ,	PgDn
Fn+ ? /	↑
Fn+Alt	←
Fn+app	↓
Fn+Ctrl	→

HR-2

Zaključavanje Windows tipke:

Fn+win: Left WIN Window Key + APP lock / unlock (zadano je otključano)

FN + Left Ctrl = Odabir 3 različita FN načina rada tipkovnice.

* Način rada 1:

Pritisnite 1 ispisuje 1. Pritisnite Y ispisuje Y. Pritisnite FN+Y aktivira se "Prtsc".

* Način rada 2:

Pritisnite 1 aktivira se F1. Pritisnite Y ispisuje Y. Pritisnite FN+1 ispisuje 1, pritisnite FN+Y aktivira se "Prtsc", pritisnite /? aktivira se ↑

* Način rada 3:

Pritisnite 1 aktivira se F1. Pritisnite Y aktivira se "Prtsc". Pritisnite FN+1 ispisuje 1, pritisnite FN+Y ispisuje Y, pritisnite /? aktivira se ↑

Napomena: multimedijske tipke Z - N se ne mijenjaju, da bi ste pristupili multimedijским tipkama pritisnite FN+Z~N.

Karakteristike:

- * 61 tipki US raspored tipki, 62 tipke svi ostali
- * Double injection tipke
- * Izmjenjivi prekidači
- * RGB osvjetljenje
- * Full keys anti-ghosting
- * Duple nogice za podizanje, 4 silikonske papučice protiv sklizanja
- * 1.8 metara pleteni kabel
- * Kompatibilna s: Win XP, Win7, Win8, Win10, Win11, OS X, Linux
- * Memorija u slučaju nestanka napajanja
- * Dimenzije: 292 * 102 * 39 mm
- * Težina: 530 g

HR-3

WARRANTY CARD / JAMSTVENI LIST

ITEM/MODEL: Naziv/model proizvoda:	
RECEIPT NO. / DATE OF PURCHASE: Broj i datum računa:	
SELLING SPOT (COMPANY): Prodajno mjesto:	
THE CUSTOMER: Kupac:	
WARRANTY PERIOD (MONTHS): Jamstveni rok (Mjeseci):	36
SIGNATURE / STAMP: Potpis i pečat:	

All White Shark products are examined and tested after each stage of the production process and have all the required certificates (EMC, CE...). The products are subject to the following warranty conditions: • The warranty period for White Shark products is 36 months (on batteries 6 months) and begins on the day of being sold in the store. • The warranty can only be claimed upon presentation of the original purchase invoice and a filled warranty paper with a stamp from the store it was bought at, and if the product has original packaging and all components and equipment. • All malfunctioning of the product resulting from factory defects, that occur during the warranty period, and in the normal use of the product in compliance with all instructions will be removed. This warranty covers only defects in material and production. • If the product malfunctions during the warranty period, your White Shark distributor will give you the product (after which is checked by a professional) repaired or replaced. • If the repair at the authorized service center is not completed within 30 days of being received at the service center, we will replace the product with a new one. If the repair during the warranty period lasts longer than 15 days, the warranty period is extended by as many days as the repair lasted. • If the device needs to be repaired within the warranty period, contact the store where you bought the product. If the product has to be sent to an authorized service center or general distributor, please send the product (with all parts and accessories) in the original packaging and with all the necessary documents (invoice, warranty card, etc.). The product can be repaired only in the authorized service center of the importer. The costs of shipping the product to the service center are funded by the customer. Possible damage to the product that can occur during transport is at the expense and risk of the buyer. Sending the product from the service center to the customer is funded by the service technician/the importer. This warranty does NOT cover: • Damage or malfunctions that would occur as a result of incorrect connection, incorrect polarization, incorrect battery placement, etc. • Defects caused by improper handling of products, use of parts or equipment that is not prescribed by our specifications, unauthorized product modification, and defects mechanical damage to the product. • Defects that can occur due to product fall, use of force, natural disasters (flood, fire, thunder, earthquake, ...), dust, battery leakage, due to unstable 220V voltage, frequent variations and/or power outages, etc. • Damage caused during transport to the customer. • Products that have been opened or repaired by an unauthorized person. • Parts that are considered consumables such as batteries, etc.

Svi White Shark proizvodi su provjereni i testirani nakon svake faze proizvodnog procesa te imaju sve potrebne certifikate (EMC, CE...).) te podliježu sljedećim jamstvenim uvjetima: • Jamstveni rok na White Shark proizvode je 36 mjeseci (na baterije 6 mji) i počinje teći danom prodaje u trgovini. • Jamstvo se može ostvariti samo uz predloženje originalnog računa o kupnji i uradno popunjenog jamstvenog lista • sa žigom trgovine, te ako proizvod ima originalnu ambalažu i sve sastavne dijelove i opremu. • Svi nedostaci i kvarovi koji su posljedica tvorničkih grešaka i koji su nastali u jamstvenom roku i pri normalnoj uporabi proizvoda i pri pošiljanju svih naputaka će biti otklonjeni. Ovo jamstvo obuhvaća samo greške nastale u materijalu i izradi. • Ako se proizvod pokvari tijekom jamstvenog roka, Vas White Shark distributer će Vam proizvod popraviti ili zamijeniti nakon što ga provjeri stručna osoba. • Ako popravak u ovlaštenom servisu nije izvršen u roku 30 dana od primitka u servis, proizvod ćemo zamijeniti novim. U slučaju da popravak u jamstvenom roku traje duže od 15 dana, jamstveni rok se produžuje za onoliko dana koliko je popravak trajao. • Ako se ukaže potreba popravka uređaja u jamstvenom roku, kontaktirajte trgovinu u kojoj ste proizvod i kupili. Ako proizvod treba poslati ovlaštenom servisu ili generalnom distributeru, molimo Vas da kompletan proizvod (sa svim dijelovima i opremom) bude zapakiran u originalnu ambalažu te da priložite sve potrebne dokumente (račun i ovjereni jamstveni list). Popravak aparata vrši se isključivo u ovlaštenom servisu uvoznika. Troškove prijevoza proizvoda na servis snosi kupac. Kupac preuzima rizik za moguća oštećenja tijekom prijevoza. Slanje proizvoda od servisa do kupca snosi servis/er tj. uvoznik. Ovo jamstvo NE obuhvaća: • Oštećenja ili kvarove koji su nastali kao posljedica nepravilnog priključivanja, krive polarizacije, pogrešnog stavljanja baterija i sl. • Kvarove nastale zbog neopisanog rukovanja proizvodom, korištenja dijelova ili opreme koja nije propisana našim specifikacijama, neovlaštenog modificiranja proizvoda te kvarove nastale mehaničkim oštećenjem proizvoda. • Kvarove koji mogu nastati uslijed pada proizvoda, uporabe sile, više sile tj. elementarnih nepogoda (poplava, požar, grom, potres...), uslijed curenja baterije, uslijed nestabilnog 220V napona, čestih varijacija i/ili nestanka struje i sl. • Oštećenja nastala pri prijevozu do kupca. • Proizvod koji je otvoren i/ili popravljan od strane neovlaštene osobe. • Dijelove koji se smatraju potrošnim kao što su baterije i sl.



HR-4