

User manual

| Combination Key | Function | Description |
|-----------------|--|--|
| FN+ESC | • | |
| FN+右 shift+ESC | ~ | |
| FN+1 | F1 | |
| FN+2 | F2 | |
| FN+3 | F3 | |
| FN+4 | F4 | |
| FN+5 | F5 | |
| FN+6 | F6 | |
| FN+7 | F7 | |
| FN+8 | F8 | |
| FN+9 | F9 | |
| FN+0 | F10 | |
| FN+- | F11 | |
| FN+= | F12 | |
| FN+ ↑ | Increase the light brightness | 3 levels + light off Pls note all breathing light effect didnot support light off |
| FN+ ↓ | Decrease the light brightness | 3 levels + light off Pls note all breathing light effect didnot support light off |
| FN+ ← | Decrease the light speed | 3 levels |
| FN+ → | Increase the light speed | 3 levels |
| FN+ \ | Light modes shift | Total 17 kinds of light modes |
| FN+WIN-L | Windows lock | |
| FN+space bar | Return KB to the default status | Long press 3 seconds |
| FN+Y | Print Scr | |
| FN+U | Scroll Lock | |
| FN+I | Pause | |
| FN+H | Insert | |
| FN+J | Home | |
| FN+K | Page Up | |
| FN+N | DEL | |
| FN+M | End | |
| FN+,< | Page Down | |
| FN+Backspace | DEL | |
| FN+CTRL-L | * 1~=/+ shifts to F1 to F12 * Y U I H J K N M < shifts to Print Scr Scroll Lock Pause Insert Home Page Up DEL End Page Down | |
| FN+W | Shifts between W A S D and ↑ ↓ ← → | |

Upute

| Kombinacija tipki | Funkcija | Opis |
|-------------------|---|--|
| FN+ESC | • | |
| FN+右 shift+ESC | ~ | |
| FN+1 | F1 | |
| FN+2 | F2 | |
| FN+3 | F3 | |
| FN+4 | F4 | |
| FN+5 | F5 | |
| FN+6 | F6 | |
| FN+7 | F7 | |
| FN+8 | F8 | |
| FN+9 | F9 | |
| FN+0 | F10 | |
| FN+- | F11 | |
| FN+= | F12 | |
| FN+ ↑ | Pojačavanje intenziteta LED osvjetljenja | 3 razine + ugašeno Neki efekti ne podržavaju OFF (ugašeni) način rada |
| FN+ ↓ | Smanjivanje intenziteta LED osvjetljenja | 3 levels + ugašeno Neki efekti ne podržavaju OFF (ugašeni) način rada |
| FN+← | Ubrzavanje LED efekta | 3 brzine |
| FN+→ | Usporavanje LED efekta | 3 brzine |
| FN+ | Izmjena LED efekta | 17 različitih efekata |
| FN+W+L | Zaključavanje Windows tipke | |
| FN+razmaknica | Vraćanje na početne postavke | Pritisnuti i zadržati 3 sekunde |
| FN+Y | Print Scr | |
| FN+U | Scroll Lock | |
| FN+I | Pause | |
| FN+H | Insert | |
| FN+J | Home | |
| FN+K | Page Up | |
| FN+N | DEL | |
| FN+M | End | |
| FN+,< | Page Down | |
| FN+Backspace | DEL | |
| FN+CTRL-L | * 1~=/+ se mijenja u F1 - F12 * Y U I H J K N M < se mijenja u Print Scr Scroll Lock Pause Insert Home Page Up DEL End Page Down | |
| FN+W | Mijenjanje između W A S D i ↑ ↓ ← → | |